



# Application Instructions


ENGLISH

**IMPORTANT MESSAGE • PLEASE READ!** Products must be applied properly. IKO assumes no responsibility for leaks or defects resulting from poor application or failure to properly prepare the surface to be roofed over, or failure to provide proper ventilation in accordance with minimum property standards and requirements. Review all applicable building codes, minimum property standards and requirements prior to applying these products. Use caution when stacking product on sloped roofs.

---

IKO GoldSeam shall not be exposed to UV rays for more than 30 days. IKO GoldSeam shall not be applied over uncured solvents, sealants or silicone caulking. It is the installer's responsibility to ensure that all sealants used are compatible with asphalt. In keeping with good roofing practice, apply IKO GoldSeam when the air temperature is between 45°F and 120°F (7°C and 49°C).

## STEPS 1-2

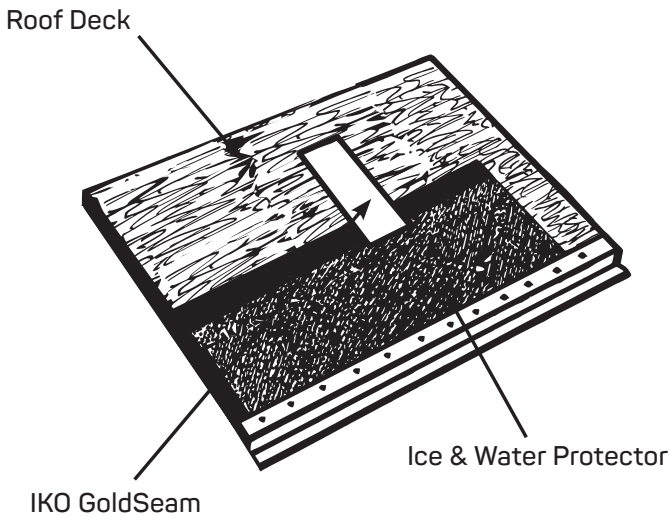


### STEP 1:

**PREPARE THE ROOF DECK:** Deck must be smooth, firm, clean, dry and securely nailed. Prepare the surface by removing any nails, dirt, or dust. Primer generally is not required for surfaces that are smooth, clean and dry. However, if adhesion to substrate is found to be marginal, a primer shall be used to ensure optimal adhesion.

### STEP 2:

**SEAL THE EXPOSED ROOF DECK JOINTS:** Apply IKO GoldSeam roof sealing tape starting from low to high point of roof in shingle fashion so that laps overlap to shed water. Center tape over roof deck joints or seams. Peel off 6" to 12" of release film from one end, and begin applying with firm, uniform pressure (hand roller is recommended) over entire surface of the tape. Allow 4" to 6" overlaps between pieces of tape. IKO recommends covering the taped deck with roof underlayment as soon as possible.

## STEP 3

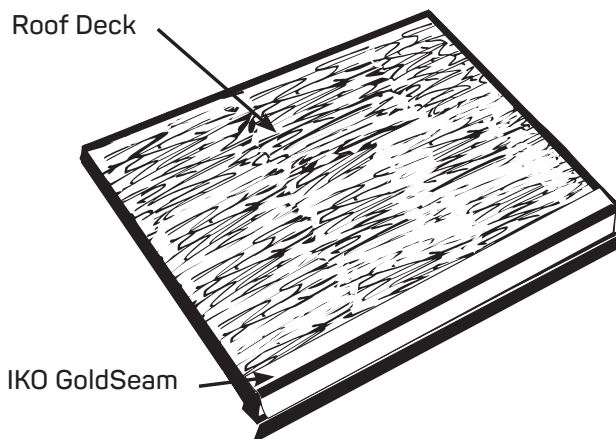

### STEP 3:

**SEAL GAPS AT EAVES:** Apply IKO GoldSeam roof sealing tape on the edge of the eaves, wrapping it down over the fascia to cover any gap between the deck and the fascia. This will prevent water infiltration at any gaps in the eave fascia area. **NOTE:** Install IKO GoldSeam prior to installing drip edge. The tape shall be covered by drip edge so that the tape is not exposed to UV rays.

**OTHER USES:** IKO GoldSeam roof sealing tape is a tough and durable material that can adhere to most substrates to add protection against water penetration